


Congratulations on your new

Europe Magic Wand (EMW)

IMPORTANT BEFORE USE

Please read these instructions thoroughly before using your EMW. You can also find the instructions online at europemagicwand.com/user-guide

START	AVOID OVERHEATING
<ol style="list-style-type: none"> 1. Start your Europe Magic Wand by pressing “+” continuously for 2 seconds. (child lock) 	<ol style="list-style-type: none"> 1. Make sure that your Europe Magic Wand can vibrate freely and dispose heat - ie. don't hold the head tight and do not cover it with blankets, pillows or the like. 2. Adhere to the maximum running time of 25 min. and do only use Europe Magic Wand accessories as specified on these. 3. If the overheating breaker trips - you must allow your appliance to cool down for at least 5 minutes before further use.

MASSAGE AND USE

Massage loosen up muscle groups, ease tensions in the body and gives more energy to handle a busy lifestyle. For many people, massage also opens the door to a world of sexual wellness that often contains more than they ever thought possible.

How to use your Europe Magic Wand

1. Plug in the socket and switch on by pressing “+” continuously for 2 seconds (child lock).
2. Adjust the massage intensity using “+” and “-”.
3. Use a light grip on the handle and move one side of the vibrating head in circular motions over the area to be massaged.
4. It is recommended that you start at the lowest intensity and then increase as you feel the need for it and slowly learn to know your Europe Magic Wand.

Important - avoid injuries

- ▶ People with blood circulation problems or reduced sensation (eg. Diabetics) should not use Europe Magic Wand without consulting a doctor.
- ▶ Never massage on an area that is raised, inflamed or have a rash.
- ▶ Do not massage the same area more than 3 minutes, then you should move to a new place.
- ▶ Stop immediately if you experience pain, tingling or numbness.
- ▶ If you are in doubt - seek medical advice before use.

Cleaning

1. Pull the plug out of the socket.
2. Wipe with a damp cloth. NEVER use water or other liquids to clean. (read the safety instructions)

SAFETY INSTRUCTIONS

- ▶ Only connect your EMW to 230 volts AC and do only use EMW to the intended purpose.
- ▶ Always unplug EMW after use.
- ▶ EMW must never be immersed in water or other liquids.
- ▶ Never use or store EMW near water or under humid conditions, for example in the bathroom, sauna or near a swimming pool.
- ▶ Always inspect the appliance, the cord and the plug for defects or damage before use. If the cord is damaged the EMW is defect and should be discarded.
- ▶ EMW is for domestic use only and may not be used professionally.

- ▶ EMW is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge about the appliance, unless they have been instructed in the use of the EMW by a person responsible for their safety.
- ▶ If EMW is used for other purposes than the intended or is not used in accordance with this user guide, the user is fully responsible for any consequences. Any damage to the EMW or other to anything else, as a consequence of this, is not covered by the warranty.
- ▶ EMW may not be used if it has been wet, is not working properly or has been damaged. Contact the manufacturer at emw@amokmarketing.com if in doubt.

DISPOSAL

Electrical appliances must not be disposed as household waste. It must be submitted to proper waste management and recycling in accordance with the laws of your country. Thank you for helping us take care of the environment.



WARRANTY

In case of a complaint, always go to europemagicwand.com/warranty. There you will find help and guidance.

As a consumer you are entitled to a warranty under the applicable law of the land in which the goods are purchased. In all EU countries the warranty is valid for 24 months from receiving the goods, as long as you inform the seller about the error within 2 months after discovery.

The warranty requires documentation in the form of a valid proof of purchase. The appliance shall be returned where it was purchased.

Limitations of the warranty

- ▶ The warranty will be void if any service, repairs or modifications are made to the EMW. And if EMW is used commercially.
- ▶ Damaged caused by intentional or unintentional misuse, accidents, lack of care and maintenance is not covered. This also includes damage caused by incorrect electrical installation, voltage or mains voltage.
- ▶ Damage during transport and the costs of transport or shipping are not covered.
- ▶ Only units purchased and used in Europe are covered.

If you experience problems with your EMW

If you experience problems with your EMW and are in doubt about warranty or use, feel free to contact the manufacturer at emw@amokmarketing.com for help and guidance.

CANCELLATION OF PURCHASE

In the EU there are special rules for products not purchased in a physical store. As a consumer you then have the right to cancel your purchase within at least 7 days after receiving your goods. In many countries the deadline is longer.

Limitations of the right of withdrawal

If you want to take advantage of the right of withdrawal, DO NOT break the transparent sealed plastic bag around your EMW as the seal is your proof that the item is new and unused.

You can read more about your right of cancellation here: europemagicwand.com/warranty.

SPECIFICATIONS

- ▶ Model : EMW-230V CE RoHS
- ▶ Power Source Voltage / Frequency / Consumption : 230 V AC / 50 Hz / 15 watt
- ▶ Vibration Frequency : 3200/min - 6000/min
- ▶ Maximum running time : 25 minutes
- ▶ Weight / Length : 680 g / 32 cm
- ▶ Produced in China for Amok Marketing ApS

Subject to alterations and improvements. Copyright © Amok Marketing ApS.



EMW-230 V CE RoHS is tested by a certified test lab to meet the following standards

RoHS II 2011/65/EU (Restriction of Hazardous Substances)

LVD (Electric safety)

- ▶ EN 60335-1: 2002 + A1: 2004 + A1: 2004 + A12: 2006 + A2: 2006 + A13: 2008 + A14: 2010 + A15: 2011
- ▶ EN 60335-2-32: 2003 + A1: 2008
- ▶ EN 62233: 2008

EMC (Electromagnetic compatibility)

- ▶ EN 55014-1: 2006 + A1: 2009 + A2: 2011
- ▶ EN 55014-2: 1997 + A1: 2001 + A2: 2008
- ▶ EN 61000-3-2: 2006 + A1: 2009 + A2: 2009
- ▶ EN 61000-3-3: 2008

ErP 2009/125/EC (Energy efficiency)

The test lab further tested the SILICONE cap to meet

- ▶ EN 14372:2004 (Phthalate free)
- ▶ Polynuclear Aromatic Hydrocarbons free (PAHs)
ZEK 01.4-08 of German ZLS and its amendments

CE

